
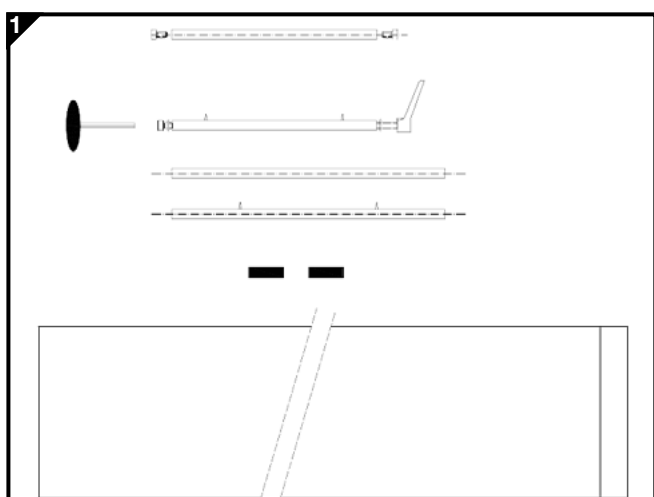



Product notes

Installation Instructions Unistandard table CPU holder

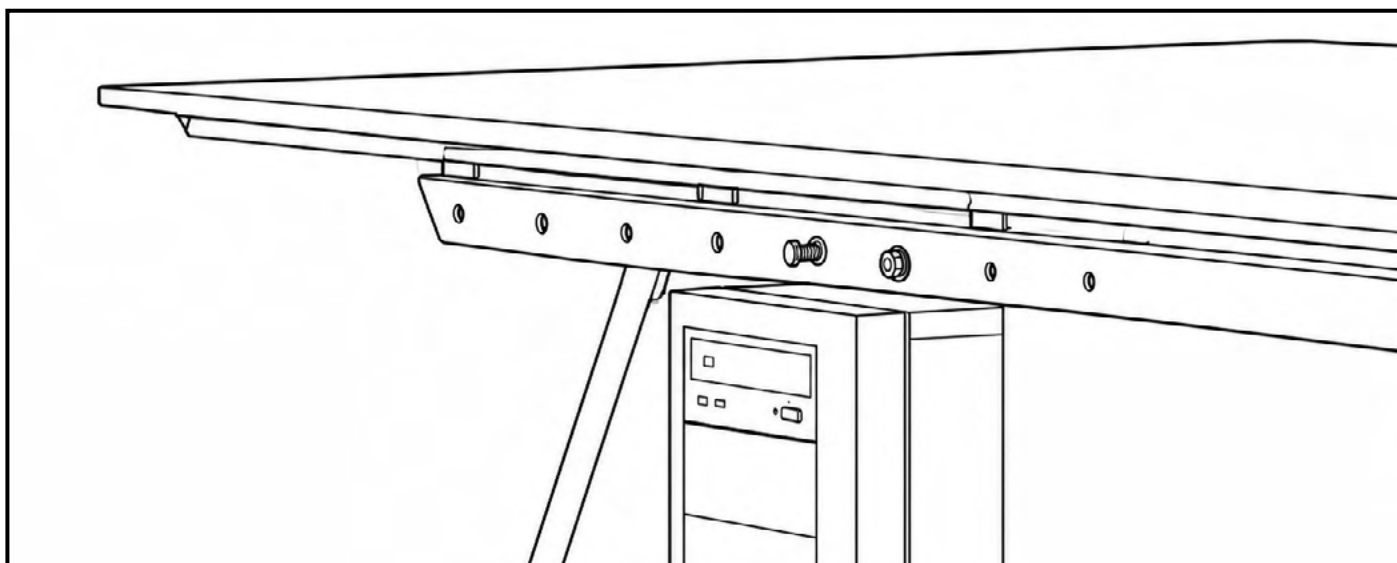


Two rods, one either 300 or 400 mm long and the other either 295 or 395 mm long, the shorter rod being fitted in each case with grip pins, the screws for the rods, a fabric ribbon 250 mm wide and 1400 mm long with a loop at both ends and rubber strips which fit over the angle irons to protect the CPU unit. A T-shaped key and a handle enable the rod with the pins to be turned to tension the ribbon


Product notes

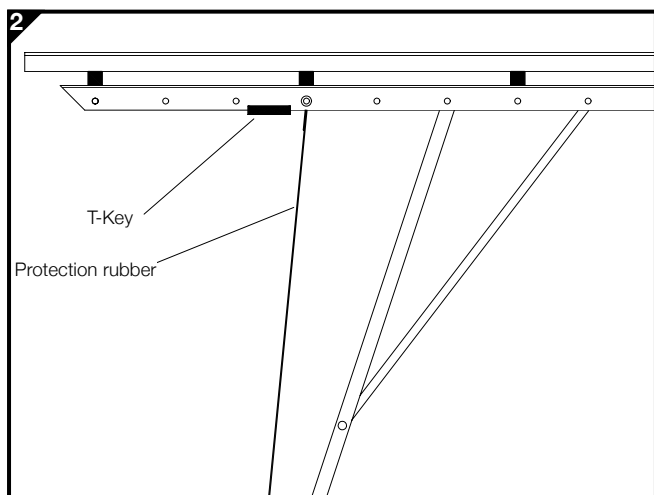

Select holes in the angle irons at the location desired for the CPU unit. The spacing between them should be slightly less than the width of the CPU unit. Slip the pieces of protective rubber over the edges of the angle irons above where the CPU unit will be

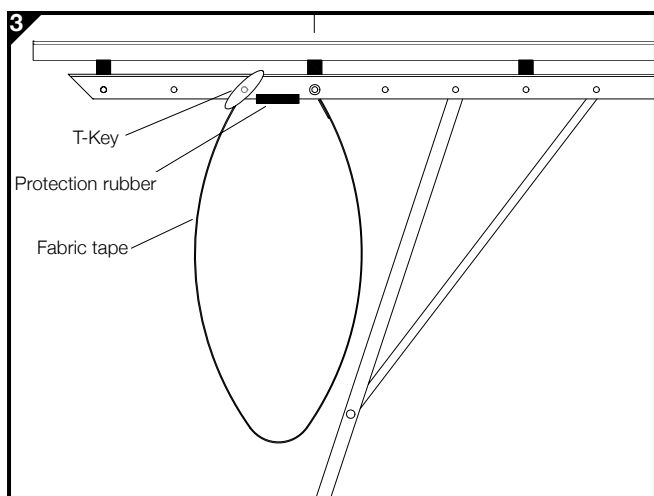


Insert the longer of the two rods through the loop at one end of the ribbon and screw the rod in place between the angle irons

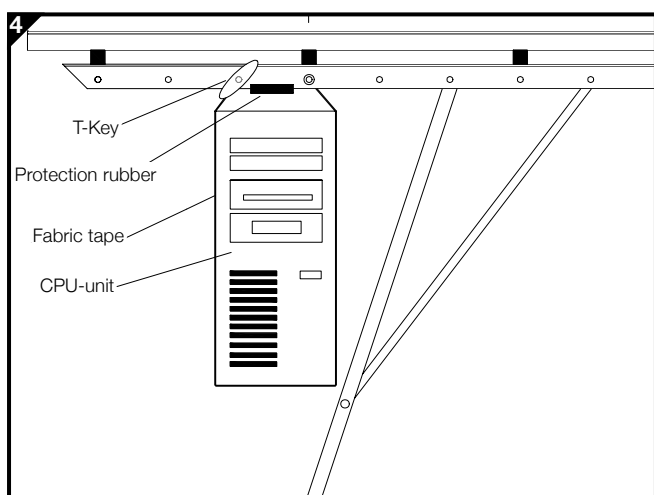


Insert the shorter rod through the coop at the other end of the ribbon and mount it between the angle irons using the handle and the longer socket head screw such that the spacing between the rods is slightly less than the width of the CPU unit

Product notes

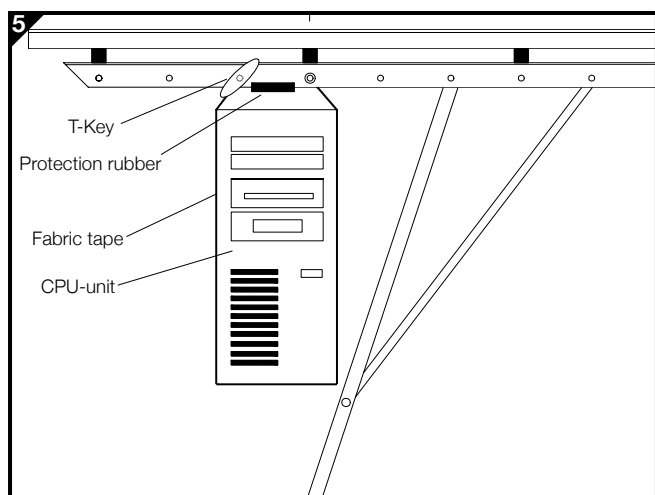

Wind a few turns of the ribbon onto the rod and lock the rod in position by pulling the handle outwards (the handle has a ratchet function for tensioning the ribbon and is locked when pulled out). Place the CPU unit on the ribbon

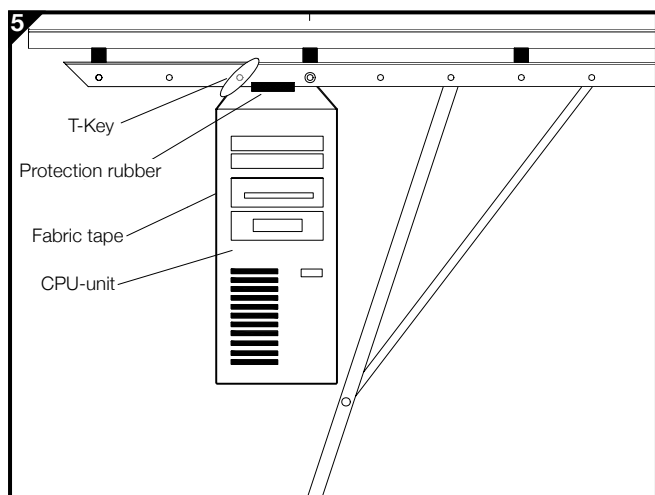

Loosen the rod slightly and tighten the ribbon with the T shaped key until the CPU unit is held firmly against the angle irons. Tighten the rod again to prevent the ribbon from becoming slack